



Volkswagen Amarok 4-Zyl. und V6			
Lenkanschlag			
Nummer:	1070 0076	Stand:	06.2020
Revision:	00	Sprache:	EN

## Installation guide 1070 0076

This installation guide applies to this part n°/descriptions:

1070 0076 Amarok 4 cyl. and V6 – Steering stop



Volkswagen Amarok 4-Zyl. und V6			
Lenkanschlag			
Nummer:	1070 0076	Stand:	06.2020
Revision:	00	Sprache:	EN

## Important

To ensure proper function and optimal quality of our parts, their installation must be done in accordance with this installation guide and according to Volkswagen manufacture's specifications in a professional workshop. SEIKEL GmbH and its employees shall not be responsible for damage and its consequences of any nature, which are caused due to non-observance or ignorance of these guidelines. Warranties shall be void for incorrectly performed installations.

## Installation guide

Please refer to the Volkswagen instructions for the exact working steps as well as the tightening torques. In case of deviation, our specifications shall be applicable.




### Parts list

- 1x spacer left
- 1x spacer right



Installation on the right side of the vehicle:  
Dismantle right-sided front wheel and loosen the bellow seal clamps on steering gear and tie rod.

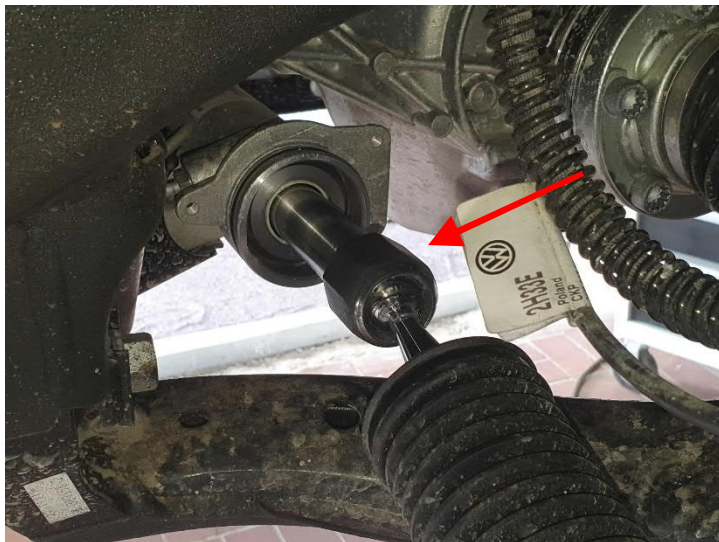

Release bellow from the steering gear and pull it over the tie rod. Detach tie rod from the handlebar.



Remove the tie rod from the handlebar.



Coat large spacer on one side with grease.




Push the spacer with grease-coated side towards the steering gear over the handlebar and press it with a suitable screwdriver against the stop in the steering gear.




Reinstall the tie rod on the handlebar and tighten according to factory specifications.



Reaffix bellow seal on the steering gear using both clamps.

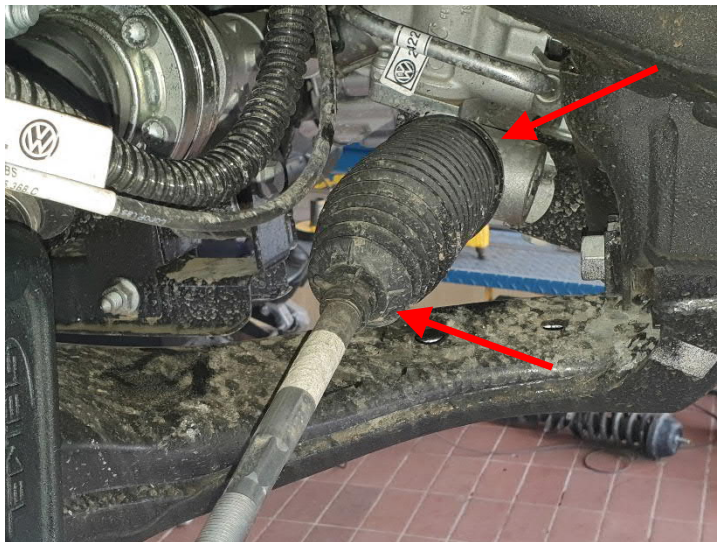

Installation on the left side of the vehicle: Dismantle left-sided front wheel and loosen the bellow seal clamps on steering gear and tie rod.

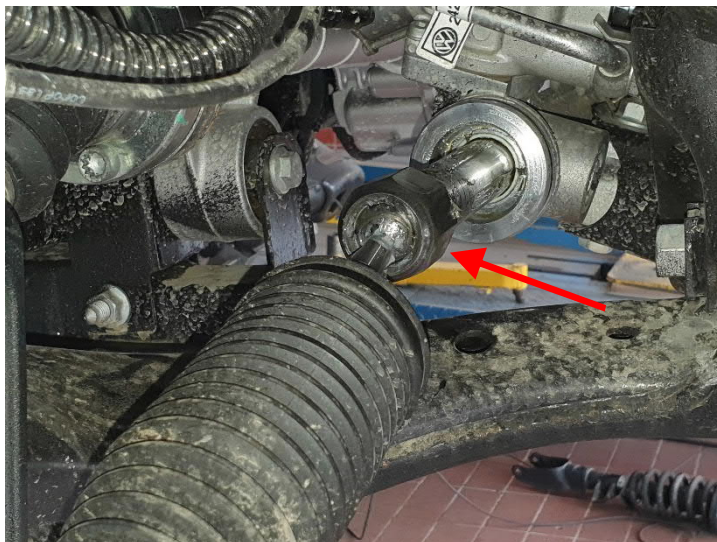


Release bellow from the steering gear and pull it over the tie rod. Detach tie rod from the handlebar.



Remove the tie rod from the handlebar.




Coat small spacer on one side with grease.

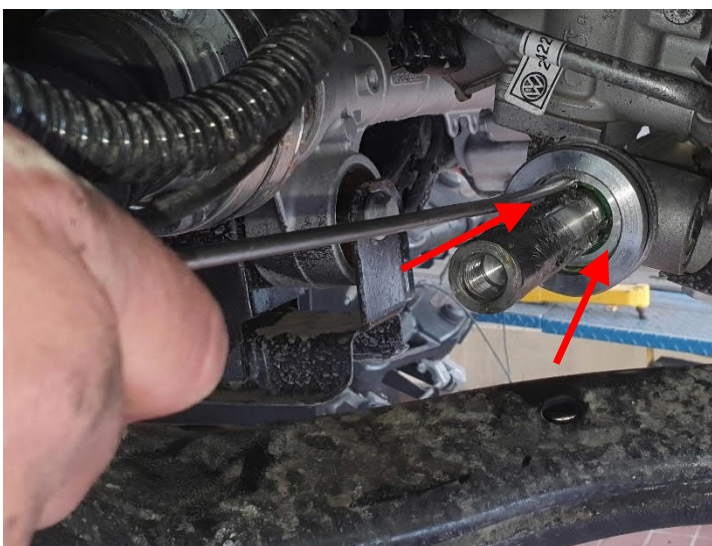

Push the spacer with grease-coated side towards the steering gear over the handlebar and press it with a suitable screwdriver against the stop in the steering gear.



Reinstall the tie rod on the handlebar and tighten according to factory specifications.

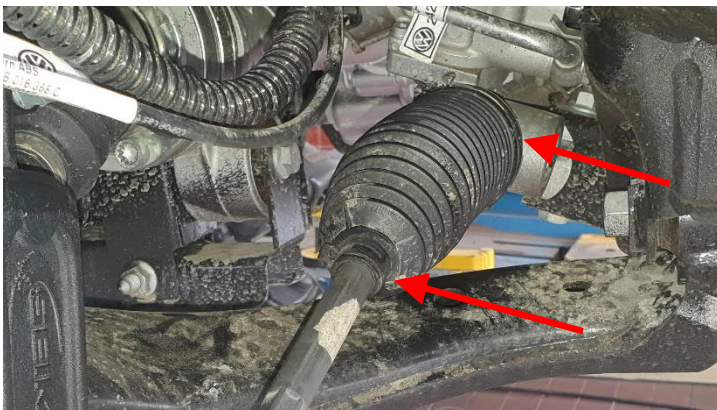

Reaffix bellow seal on the steering gear using both clamps.