



This installation guide applies to this part n° and vehicles:

1472 0003 VW Amarok 2023 – Rockslider to protect the sills


1472 0005 VW Amarok 2023 – Rockslider „Plus“ to protect the sills  
and to be used as a step

1472 0007 VW Amarok 2023 – Stone chip protection for SEIKEL Rockslider

This parts packages also fits all Ford Ranger trim levels – XL to PLATINUM –  
from model year 2023, including Ford Ranger Raptor.



Parts list: 1472 0003 Rockslider

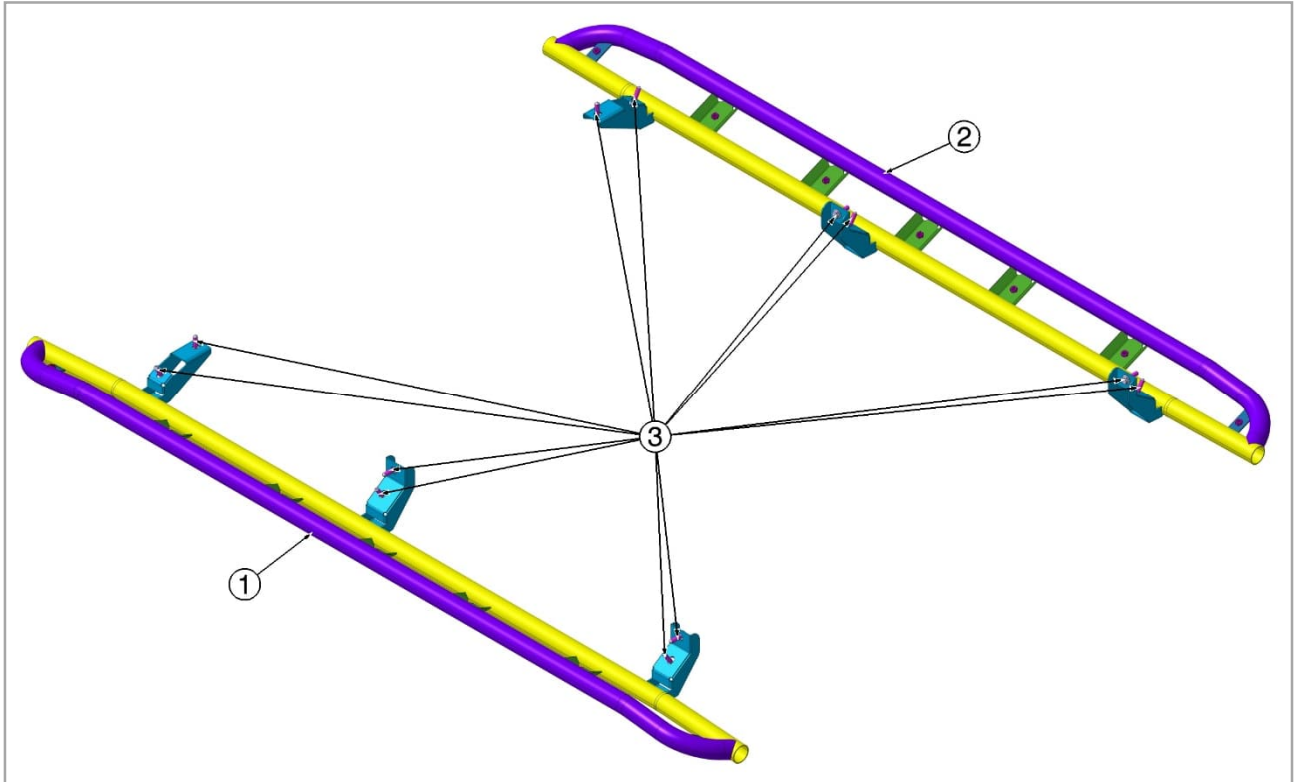


① + ② for Rockslider „Plus“ two adjoining parts, welded

Pos.	Part n°	Description	Quantity
1	14720102	Rockslider left	1
2	14720106	Rockslider right	1
3	17100116	Hexagonal collar bolt M10x35	12




Parts list: 1472 0005 Rockslider „Plus“

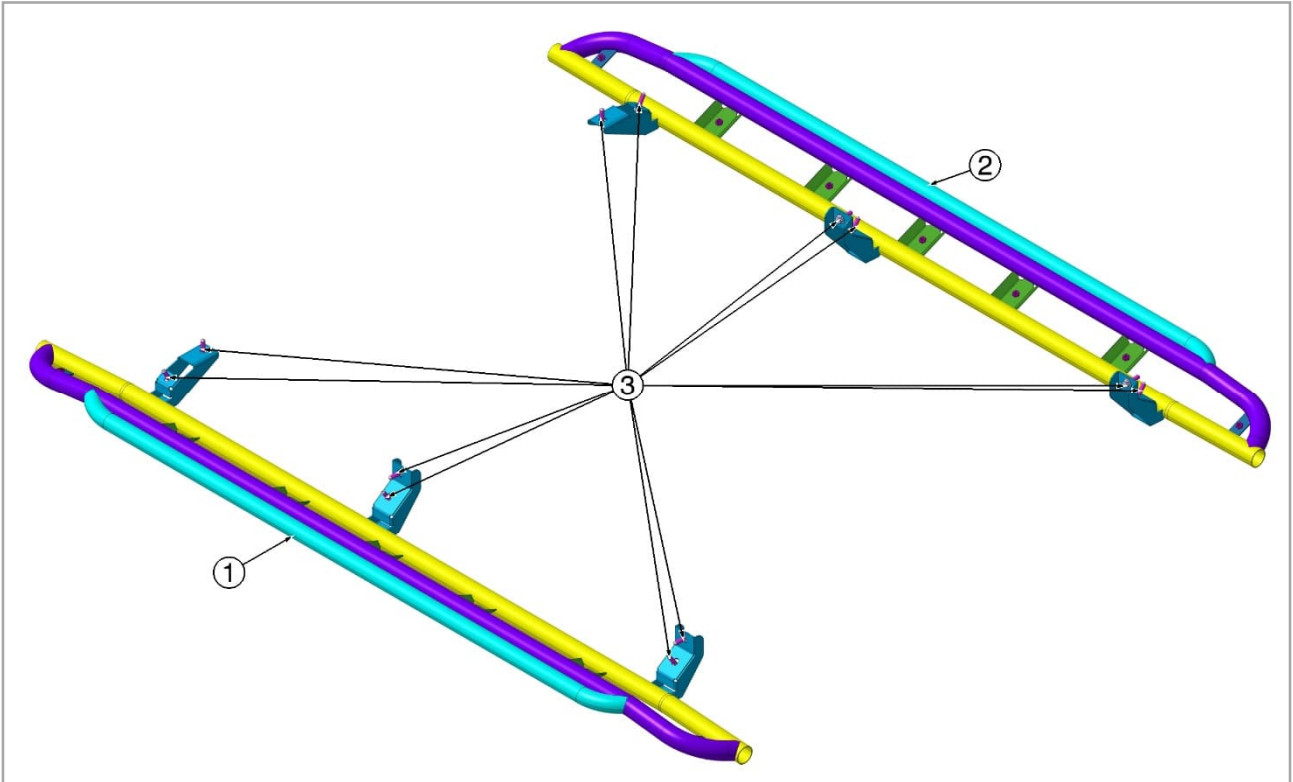

Pos.	Part n°	Description	Quantity
1	14720115	Rockslider „Plus“ left	1
2	14720116	Rockslider „Plus“right	1
3	17100116	Hexagonal collar bolt M10x35	12



Parts list: 1472 0005 Stone chip protection for Rockslider „Plus“

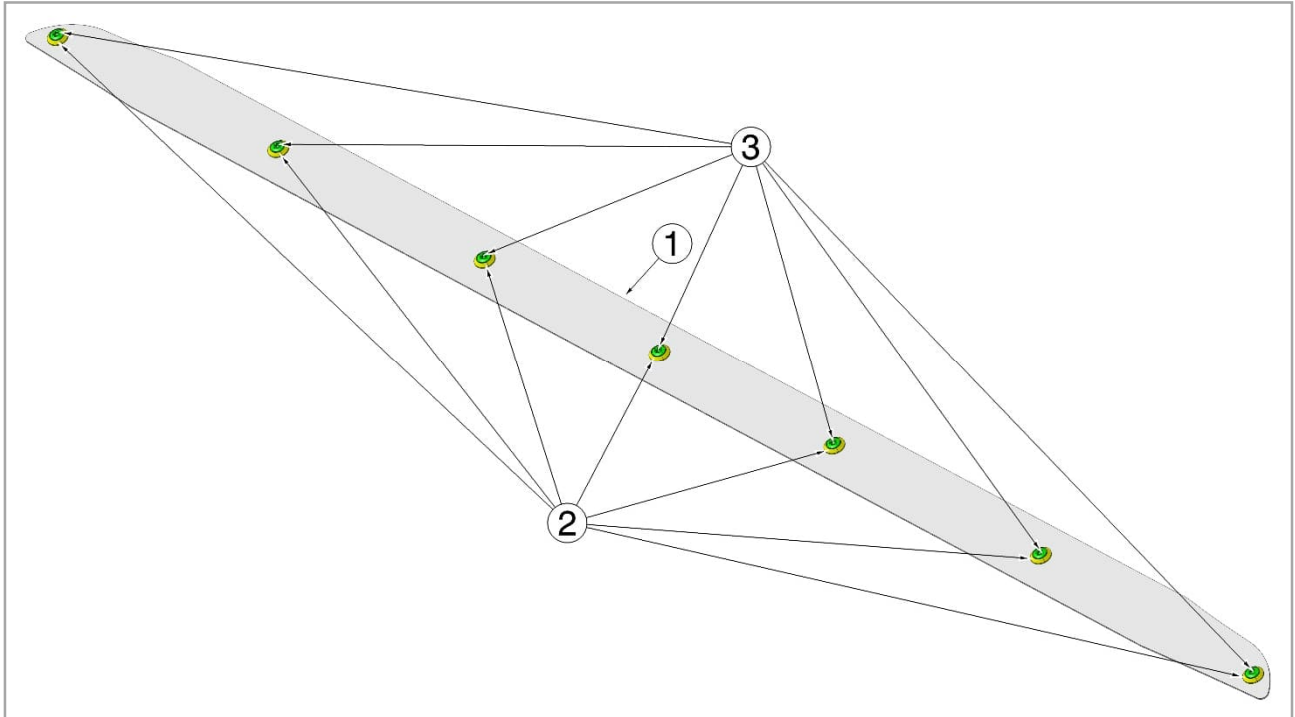

Pos.	Part n°	Description	Quantity
1	14720051	Stone chip protection for Rockslider	2
2	17500425	Countersunk washer 8x25	14
3	17100075	Lens head screw M8x25	14



## Important

To ensure proper function and optimal quality of our parts, their installation must be done in accordance with this installation guide in a professional workshop and according to the car manufacturer's specifications. Seikel GmbH and its employees shall not be responsible for damage and its consequences of any nature, which are caused due to non-observance or ignorance of these guidelines. Warranties shall be void for incorrectly performed installations.

*In order to maintain driving safety and functioning of all moving and electrical parts, we recommend keeping the vehicle underbody free of heavy contaminations. This applies especially after every use in difficult terrain with e.g. mud, sand/gravel and water crossings.*

*Otherwise, it is a good idea to clean the underbody regularly, e.g. at the end of the winter half-year.*

*For this, existing protective plates of the vehicle underbody (e.g. engine, gearbox, tank & rear axle) should be dismantled beforehand.*

## SEIKEL warranty certificate through product registration

When you purchase and install a SEIKEL product, you need a warranty certificate so that we can cover costs in the event of a warranty claim. You can download this warranty certificate from our website at [www.seikel.de/downloads](http://www.seikel.de/downloads). Please fill out the form and return it to us by e-mail or fax. This is the only way to ensure that we can cover the costs in the event of a warranty or guarantee claim.

The certificate is valid for both - commercial and private customers.

## Installation instructions

The exact working steps as well as tightening torques are to be taken from the instructions of the respective vehicle manufacturer. In case of deviations, our specifications of Seikel GmbH apply.



## Best practise applies to Volkswagen Amarok and Ford Ranger

The following description only outlines the work on the right side of the vehicle. The same steps must be carried out on the left side of the vehicle.



Remove the standard running boards on the Amarok or the side skirt protection on the Ford Ranger. Attach the SEIKEL Rockslider to the same connection points with the supplied M10x35 collar bolts and tighten according to the specifications of the vehicle manufacturer.



The fully assembled SEIKEL Rockslider on Volkswagen Amarok can be seen here.



If the stone chip protection were ordered for the SEIKEL Rockslider, attach them on the left and right side using the countersink washers and M8x25 lens head screws provided and tighten them to 25 Nm.

The fully assembled SEIKEL Rockslider "Plus" with stone chip protection on the vehicle – example Volkswagen Amarok.